

Installation Instructions

Protect-it MAXI features

Protect-it MAXI™ is supplied in a MAXIPAC consisting of 20 Protect-it MAXI's and 8 Connecting Pins.

Each Protect-it MAXI™ has 4 pin location holes, two per side into which the connection pins can be inserted. This choice of holes makes Protect-it MAXI expandable to suit multiple column sizes. The best pin location hole for the application will depend on the column size.


As a guide, the inner holes are generally used for corners.

How Many MAXI's do I need?

Using the chart below as a guide, determine how many MAXIPAC's you will need per column

ALL of the sizes below can be created from one or more Protect-it MAXIPACs demonstrated in the table below.

Column Size Examples used as a guide only	MAXIPACs required for 0.5m (20") high	MAXIPACs required for 1m (40") high
100mm x100mm (4 x 4") 150mm x150mm (6" x 6")	0.5	1
200mm x200mm (8" x 8") 225mm x225mm (9" x 9") 250mm x250mm(10" x 10") 275mm x275mm(11" x 11") 300mm x300mm (12" x 12") & rectangular combinations	1	2
300mm x300mm (12" x 12") 325mm x325mm (13" x 13") 350mm x350mm (14" x 14") 375mm x375mm (15" x 15") 400mm x400mm (16" x 16") 425mm x250mm (17" x 17") 450mm x450mm (18" x 18") 475mm x475mm (19" x 19") & rectangular combinations	1.5	3
450mm x450mm (18" x 18") 475mm x475mm (19" x 19") 500mm x500mm (20" x 20") 525mm x525mm (21" x 21") 550mm x550mm (22" x 22") 575mm x575mm (23" x 23") 600mm x600mm (24" x 24") & rectangular combinations	2	4
ROUND 175mm (4") ROUND 200mm (5") ROUND 225mm (6")	0.5	1
ROUND 175mm (7") ROUND 200mm (8") ROUND 225mm (9")	0.75	1.5
ROUND 250mm (10") ROUND 275mm (11") ROUND 300mm (12") ROUND 325mm (13") ROUND 350mm (14")	1	2

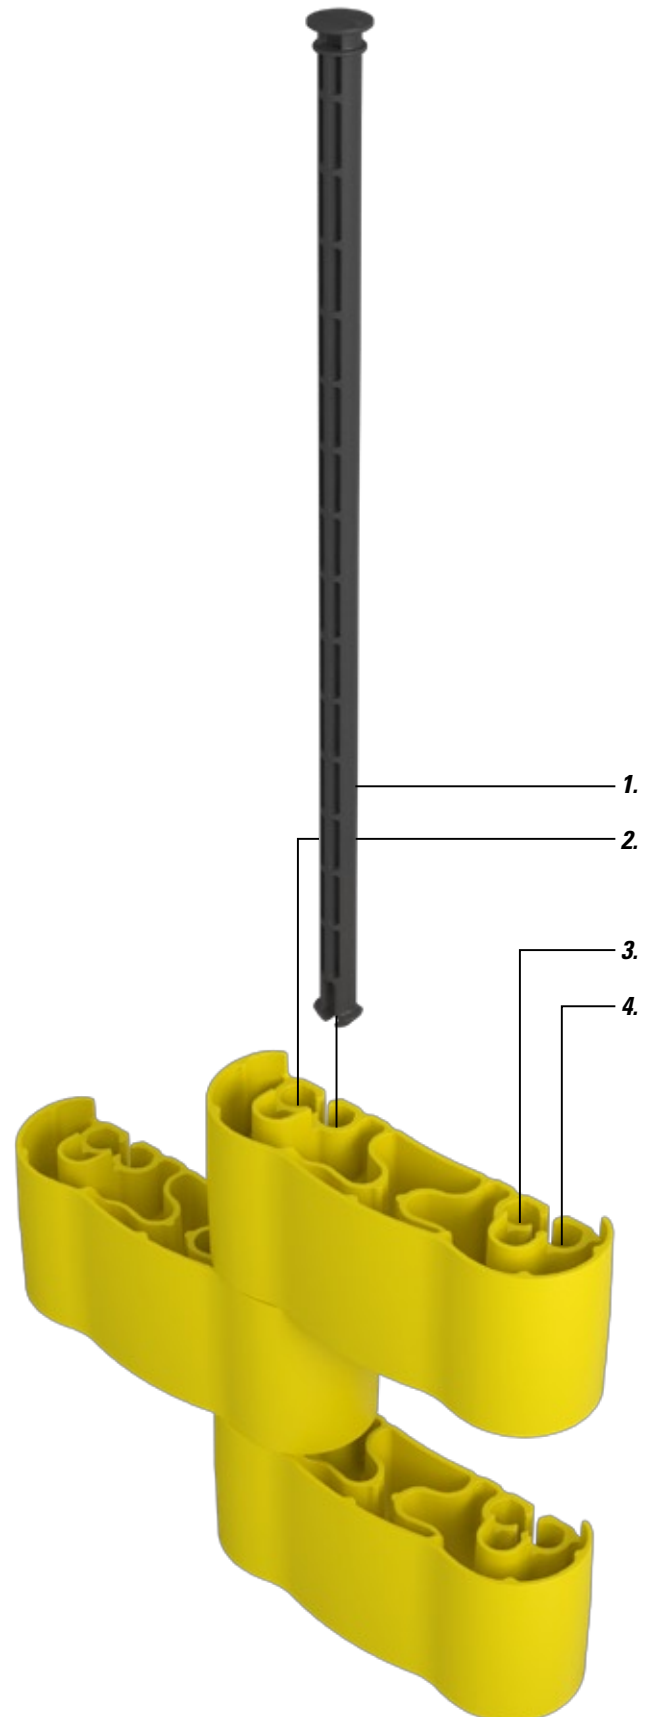

Installation Instructions


STEP 1

Remove the MAXI's from the package containing 20 protect-it MAXI's and 8 connection pins



STEP 2

Lay the the first two layers of Protect-it MAXI's loosely around the column. Make sure that the holes are aligned

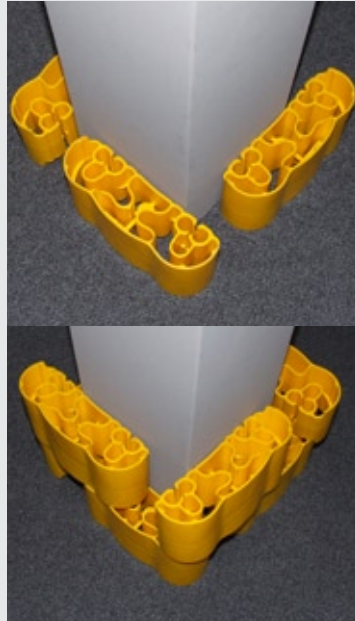


STEP 3

Insert 7 of the the pins from the top into the most suitable holes. Do not inset the last pin yet




STEP 4

Remove the unit from the column and turn it upside down so the pins heads are at the bottom and then return it to surround the column

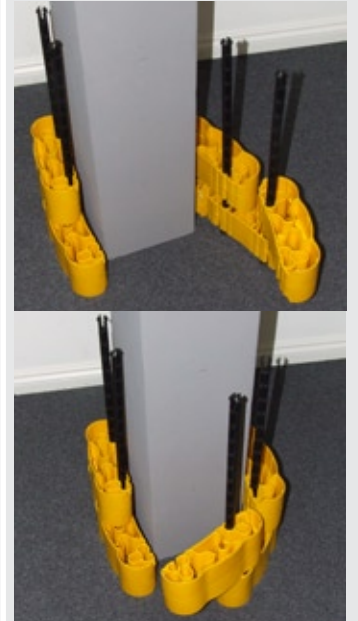

STEP 5

Assemble the remaining Protect-it MAXI's until there are five layers (500mm high)

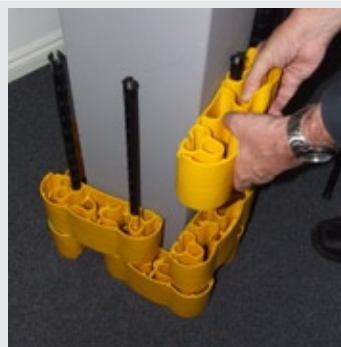

STEP 6

Insert the last pin from the top to complete the assembly



STEP 7

Your completed Protect-it MAXI assembly should look like this



STEP 8

To increase the height of the column protection, repeat steps 1-7



Replacement of damaged parts

- Remove one pin and unwrap the assembly from the column
- Replace the damaged part
- Reassemble the unit (leaving the last pin)
- Wrap around the column
- Attach the last pin

www.protect-it.com.au

Protect-it MAXI has international Patents Pending